ING. O. FIORENTINI S.R.L.
INDUSTRIAL CLEANING MACHINES

SCRUBBER MACHINE
- CUCCIOLO -

USER MANUAL

Congratulations for your choice!

FIORENTINI S.r.l. *thanking you for the preference to our product, would like to remind you that FIORENTINI's S.r.l production covers manufacture and marketing of industrial cleaning machines and is currently a leading company in this sector.*

Our tradition and competence guarantee technical quality of your choice; actually all our products are being built first quality materials through criteria that can give reliability, solidity and functionality satisfying every kind of customers. FIORENTINI has recently obtained the quality system certificate conforming to the requirements of UNI EN ISO 9001:2000.

We wish therefore inviting you to contact us, unhesitatingly, for every kind of request, as technical or commercial; we'll be pleased to be at your disposal for any information you may need.

INDEX

1. GENERAL INFORMATION

1.1. Symbols……..……..……..page
1.2. Notes…….....……..……..……..……..……..
1.3. Manual consulting……..……..……..……..……
1.4. Warranty.....……..……..……..……..
1.5. Conformity declaration…….....……..……..……

2. MACHINE FEATURES AND TECHNICAL DATA

2.1. Identifying the machine…….....……..……..……..
2.2. Description and components……..……..……..……..
2.3. Technical data…….....……..……..……..

3. SAFETY

3.1. Right use of the machine……..……..……..……..……..
3.2. Wrong use of the machine ……..……..……..
3.3. Suggested equipment……..……..
3.4. Operator qualify.....……..……..……..……..
3.5. Safety and warning devices ……..……..……..
3.6. Safety systems.....……..……..……..
3.7. Safety diagnostic signaling ……..……..
3.8. Other dangers……..……..
3.9. Security signals……..……..……..

4. INSTRUCTIONS FOR STARTING AND USE

4.1. Trasport and handling…….....……..……..……..
4.2. Storage…….....……..……..……..
4.3. How to unpack the machine.....……..……..……..
4.4. How to handle the unpacked machine…….....……..……..……..
4.5. Installation…….....……..……..……..
4.5.1. Batteries installation…….....……..……..……..……..
4.5.2. Battery charger installation……..……..……..
4.6. Control devices……..……..……..
4.6.1. Dashboard……..……..……..
4.7. Functioning……..……..……..
4.7.1. Preparing and starting the machine……..……..
4.7.2. Choosing the right detergent……..……..
4.7.3. Driving position regulation……..……..
4.7.4. Rudder bar functioning……..……..
4.7.5. Detergent control……..……..……..
4.7.6. Squeegee adjustment……..……..……..
4.7.7. Water discharge……..……..……..
4.7.8 Emergency shut-down
4.7.9. Brushes replacement……..……..……..
4.7.10. Squeegee blades replacement……..……..……..

4.7.11 Driving wheel tire replacement ……..

5. MAINTENANCE

5.1. Periodic maintenance…….....……..
5.2. Batteries maintenance……..
5.2.1. Hydrometry ……..
5.2.2. Water filling up ……...
5.2.3. Charge limits……
5.2.4. Off duty or inactive batteries ……...
5.2.5. Battery charger technical features……
5.2.6. Batteries disposal……..
5.3. Suction motor maintenance……..
5.4. Electrict equipment control……
5.5. Tests to be carried out…….
5.6. Maintenance register……

6. SERVICE

6.1. Service adresses.....…….....
6.2. Claim report…….....

1. GENERAL INFORMATION

1.1. SYMBOLS

	This symbol is used to get the operator's attention on procedures or precautions to be followed in order to avoid damages to users or to the support
	This symbol is used to get the operator's attention on general information.

1.2. PREMISE

FIORENTINI S. r. l. *is the only owner of this manual.*
The reproduction of all or part of the manual or the transmission to third parties with mechanic or electronic devices are vorbidden without a written manufacturer's authorization. This manual is supplied to the customers in one original copy when differently specified during the order.

This manual is supplied to the customer with the machine and it must be kept with it even when the machine has to be transferred.
Please, keep the manual in a safe place and for all the machine lifetime. Purchaser is responsible for showing the manual to qualified people. In case of loss ask for a duplicate to FIORENTINI Co..

FIORENTINI S.r.l. is not responsible for any kind of damages caused by people or things due to the non-observance of the instructions of this manual.

FIORENTINI reserves the right to add at any time and without notice all the technical and commercial changes considered useful for the customer. Therefore data and information in this manual can be updated.

1.3. MANUAL CONSULTING

This manual deals exhaustively with all arguments that are necessari for an easy and safe use of the machine as it is recommended by European Directives on product safety.

Therefore we suggest to all authorized operators to read carefully this manual contacting FIORENTINI S.r.l. for any explanation. The manual has to be used every time the operator forgets a procedure or when new operators have to be trained.

For publishing reasons, pictures and drawings can look different from the reality but without arising doubts.

Special symbols and **bold type** and/or *sloping* get the attention of the reader on remarkable information in particularl for safety.
The revision index is written on the left at the bottom of every page. The list of those pages that have been updated has to be found at the end of the manual.

1.4. WARRANTY

Warranty conditions are stated as below when not differently specified in the order confirmation.

WARRANTY OBJECT

The machine has been designed and built for a long-lasting use without relevant problems. Anyway, if problems arise during the warranty period, FIORENTINI S.r.l. is engaged to repair or substitute for free those parts that are broken or damaged by defective materials, working defects or imperfect assembly.
Warranty is not given for parts whose early breaking or wear and tear are due to:

- Non-respect of instructions included in this manual;
- Breaking and/or changes made up without FIORENTINI's approval;

- Not-use of genuine spare parts;
- Interventions made up by unauthorised personnel;
- Missing maintenance;
- Natural calamities.

FIORENTINI S.r.l., its purchasers and its suppliers have the same warranty for the electric and expendable materials that are sold by external suppliers.

WARRANTY CONDITIONS

The warranty is granted for 24 months since the machine delivery date. This is a single warranty term and it cannot be extended.

EXCEPTIONS

Expandable materials like brushes, squeegee blades and materials whose lifetime cannot be predetermined are not under warranty.

APPLICATION MODALITY

Defective components must be sent back to FIORENTINI S.r.l. in order to establish the anomalies causes and apply therefore the warranty. Repair and replacement under warranty will be done in FIORENTINI's workshop, by third parties or in loco. In case of repair or replacement in loco, energy sources and the use of particular equipment have to be paid by the customer himself.

INTERVENTION DEMANDS

Intervention demands must be sent to FIORENTINI Service Dpt. only after a careful analysis of the problem and its causes. Following information have to be given to FIORENTINI's agent:

- Serial number you get it from the silver label sticked on the machine (§ 2.1.);
- Code and position of the component taken from the spare parts list (§ 7.2.);
- A detailed description of the problem and its causes.

The components considered under warranty are delivered ex works; those ones being substituted belong to FIORENTINI Co..

GOODS TO BE RETURNED

In case of goods to be returned for warranty replacement, it is necessary to have a written acceptance from FIORENTINI technical department before sending them.
All defective parts must be carefully packed in order to avoid further damages during transport.
Goods must be shipped ex-warehouse and followed by :

- **serial number of the equipment where they were installed on;**
- **item code of the defective part;**
- **detailed description of the defect and of the condictions where it happened.**

In case of defective electric or electronic goods,
please return them separately from other materials,
in order to help us in dividing dangerous wastegoods
and recicle the (RAEE) as DER 2002/96/CEE LOW.

The machine warranty is no more available in case of the loss of the silver label.

1.5. CONFORMITY DECLARATION

The conformity declaration is released with the machine and the user manual.

DICHIARAZIONE-DECLARATION-DECLARATION-ERKLARUNG-DECLARACION

DICHIARAZIONE CE DI CONFORMITA'
DECLARATION OF CONFORMITE'
DECLARATION DE CONFORMITE
ÜBEREINSTIMMUNGSERKLÄRUNG
DECLARACION DE CONFORMIDAD

ING. O. FIORENTINI s.r.l.
Loc. Rombola
50030 PIANCALDOLI (FI) ITALIA

Dichiara sotto la propria esclusiva responsabilità che la macchina:
Declares under its own responsability that the machine :
Declares sous sa responsabilité exclusivement que la machine :
erklärt unter ausschließlich eigener Verantwortung, daß die Maschine :
declara bajo su propia y exclusive responsabilidad que la maquina :

FIORENTINI

Modello/model/modele/modell/modelo
Matricola/serial number/numero matricule/serienummer/numero matricula
Anno/year/annee/jahr/ano **2009**

CE

Fabbricata nel rispetto delle direttive e decreti :
and moreover is built according to the directives and decrees :
et est fabriquées i, en outré, conformément aux directives et ou décrets :
und daß sie unter Einhaltung folgender Verordnungen und/oder Dekrete hergestellt worden (sind) :
y que además ha sido fabricada en conformidadcon las directivas y/o decretos :

2006/42/CE/EC/EG-
Direttiva macchina: Machines Directive: Maschinen Richtlinie: Directive machines:

2004/108/CE/EC/EG-
Compatibilità elettromagnetica : Electro Magnetic Compatibility: Elektromagnetische Verträglichkeit: Compatibilité électromagnétique:

2002/95/CE/EC/EG-
Restrizione sostanze pericolose : Restrictions of Dangerous Substances Beschränkung der gefährlichen Mitteln :Restriction des substances dangereuses

2003/10/CE/EC/EG
Protezione da rumore: Exposure of Workers to Noise: Gefährdung der Arbeitnehmer durch Geräusch: Exposition des travailleurs aux Bruits:

È conforme alle seguenti norme :
conform to the following laws :
est conforme aux norms :
mit den folgenden Normen übereinstimmen :
está conforme a lassiguientes normas :

EN 12100-1- EN 12100-2
Norme applicate: Harmonized Standard Applied: Angewandte harmonisierte Normen: Normes Harmonisées Appliquées :

Ing. O. Fiorentini S.r.l.
Il titolare/chairmen/gérant
Ing. O. Fiorentini

Piancaldoli
Luogo e data

Firma

In caso di modifiche apportate alla macchina questa dichiarazione non e piu valida

2. MACHINE FEATURES AND TECHNICAL DATA

2.1. IDENTIFYING THE MACHINE

A silver label is sticked on the protection case of the steering column and clearly shows the data referring to the “CE” marking.

PICTURE N° 2.1

i	*The label has never to be removed and should always be kept readable. In case of damage t is necessary to ask for a duplicate. The autoscrubber machine cannot be sold without the label.*

2.2. DESCRIPTION AND COMPONENTS

The autoscrubber machine - CUCCIOLO 80 - has been designed for the cleaning of all flat surfaces by means of washing and suction of the washing water.
The electric traction system is supplied by a series of batteries which supply energy to the brushes motors, to the squeegee motor and to the suction motor.
The machine is equipped with two rotating brushes which wash the surface by means of water and detergent. Whilst the machine is running forward, the back brush (squeegee) picks the water up that is directly sucked into the recovery tank.
The accelerator pedal starts both the washing brushes and the suction motor which stop automatically after a few seconds when you leave the pedal. When the washing brushes standstill, they are non more in contact with the ground. In this way the bristles will not be damaged while the brushes are not working.
Thanks to the dashboard the operator can control all the machine functions and a series of LEDs shows to the operator the battery status or the errors detected by the electronic card.
The operator can control all the main machine functions and in particular:

- Start the washing brushes;
- Regulate the quantity of water;
- Start the suction motor;
- Start the lift or the sink of the squeegee;
- Choose the forward or back gear;
- Start or stop the machine.

The machine frame is made of zinc-plated or stainless steel in order to avoid oxidation which could compromise the machine reliability.

The main parts of the machine are:

- Zinc-plated steel or stainless steel frame;
- PE-HD plastic solution tank;
- PE-HD plastic recovery tank supplied with flexible suction piping system and drainage;
- Series of batteries placed in the recovery tank room;
- Right rotating brush;
- Left rotating brush;
- Squeegee (suction system);
- Water recovery system;
- one drinving wheel;
- two idle wheels;
- steering wheel;
- driving seat.

FIORENTINI Co., taking the new CE safety rules into consideration, manufactures the machine following the CE directives about safety and health. The materials high quality, the high technology and FIORENTINI's experience guarantee the performance and the reliability of this machine .
Each machine is tested during the manufacturing process and the final check is done before the machine is shipped out.

2.3. TECHNICAL DATA

CARATTERISTICHE TECNICHE – TECHNICAL CHARACTERISTICS – CARACTERISTIQUES TECHNIQUE

Sistema di trazione – Traction system - Systeme de traction	**Front driving wheel**
Larghezza di lavaggio – Scrubbing width – Largeur de nettoyage	**780 mm**
Larghezza squeegee – squeegee width – Largeur suceur	**1070 mm**
N° spazzole – Brushes no. – Nr. des brosses	**2 x Ø 380 mm**
Pressione spazzole – Brush pressure – pression des brosses	**65 kg.**
Area pulita per ora (mq/h) – Cleaned surface (mq/h) – Rendement jusqu'à (mq/h)	**4680 mq/h**
Autonomia – Autonomy - Autonomie	**4.5/5 h**
Serbatoio soluzione – Solution tank – Cuve solution	**125 lt.**
Serbatoio di recupero – Recovery tank – Cuve recuperation	**140 lt.**
Depressione – Water lift – Depression	**1500 mm H_2O / 17 Kpa**
Velocità di marcia avanti – Forward speed - Vitesse en marche avant	**0 – 6 Km/h**

CARATTERISTICHE TECNICHE MOTORI – TECHNICAL CHARACTERISTICS – CARACTERISTIQUES TECHNIQUE

Motore trazione – Traction motor – Moteur des tracion	**36 V - 600 W**
Motore aspirazione – Suction motor – Moteur d'aspiration	**36 V 850 W**
Motore spazzole – Brush motor – Moteur des brosses	**1100 W - 32 A - 2200rpm**

DIMENSIONI – DIMENSIONS

Dimensioni corpo macchina – Machine dimensions – dimensions de la machine	
Lunghezza – Length – Longueur	**1300 mm**
Larghezza senza carter spazzole- Width without brushes cases – Largeur sans carter brosses	**740 mm**
Larghezza con carter spazzola - Width with brushes cases Largeur avec carter brosses	**840 mm**
Altezza – Height – Hauteur	**1340 mm**
Peso senza batteria – Weight without battery – Poids sans batteries	**260 Kg.**
Guida – Driving system - Conduite	**Man aboard**
Corridoio min. per inversione ad U – Minimum aisle turn – Place pour demi-tournage	**2050 mm**
Pendenza max. superabile – Max. gradient at full load – Pente superable	**12%**
Rumorosità. – Noise level – Bruit	**79 dB(A)**

The above mentioned characteristics are not binding for the manufacturer; they can be changed without any notice . ING.O.FIORENTINI Co. is always at disposal for any information (par.7.1.).

MEASUREMENT UNITS CONVERSION

Lenght	1 inch = 1” = 25,4 mm	**Power**	1 kW = 1,36 CV = 1,34 BHP
Temperature	T (K) = t (°C) + 273 / t (°F) = 1,8 t (°C) + 32	**Pressure**	1 bar =100 kPa = 14,5 psi

3. SAFETY

3.1. RIGHT USE OF THE MACHINE

This machine is a scrubbing machine and it has been designed and built to clean in an industrial place. It can work on flat surfaces or on surfaces with a slope not higher than 10% and with a speed not higher than 1 km/h for U-turn.

3.2. WRONG USE OF THE MACHINE

- ***The machine cannot be driven by non-authorized personnel;***
- ***The machine cannot wash sloping surfaces whose gradient is higher than 10% or surfaces with holes;***
- ***The machine cannot reverse with a speed higher than 1 km/h;***
- ***The machine cannot be used in places with dangerous substances and in particular with explosive atmospheres or with a bad microclimate;***
- ***The machine cannot clean surfaces with inflammable products;***
- ***The machine cannot be used as a means of transport for people or other means of transport;***
- ***The machine protection devices cannot be modified or tampered;***
- ***Batteries must be recharged in a fanned room;***
- ***The operator have always to respect safety rules;***
- ***The operator cannot use equipments or devices that can create problems to the machine working;***
- ***The machine components cannot be modified without FIORENTINI's authorization;***
- ***The operator cannot use acids that can damage the machine;***
- ***The operator has always to respect the rules written in the user manual.***

Please read carefully and do not cover the labels sticked on the machine. FIORENTINI S.r.l. is not responsible for a wrong use of the machine (see § 3.2.)

3.3. SUGGESTED EQUIPMENT

In order to use the machine in a proper way, we suggest to use the FIORENTINI's equipment and original spare parts.
FIORENTINI S.r.l. Technical Dpt. is always at your disposal to design components or parts for a particular use of machine as requested by the customer.

3.4. OPERATOR'S QUALIFY

The scheme below sumarizes the operator qualify requested for each kind of operation.

OPERATION	OPERATOR'S QUALIFY
Driving/control of the machine	Trained operator
Installation/ disinstallation	Fiorentini technician
Mechanical parts maintenance	Fiorentini technician
Electric parts maintenance	Fiorentini technician
Cleaning maintenance	Trained operator
Dismantling and demolition	Fiorentini technician

FIORENTINI S.r.l. suggest to train the operator before using the machine. The operator also must be trained about safety rules and carefully read this manual.

FIORENTINI S.r.l. is not responsible for any possible damage to people and/or things caused by the non-observance of the instructions dealt within this manual.

3.5. SAFETY AND WARNING DEVICES

- ***It is absolutely forbidden to tamper or disconnect safety and warning devices while the machine is working;***
- ***It is important to check periodically safety and warning devices (see § 5.1.).***

Side brushes protection	CUCCIOLO is equipped with two rotanting brushes made of nylon. The machine cannot reach dangerous areas thanks to fixed steel protections set up on each brush.
Warning devices	CUCCIOLO is equipped with several warning devices: ➢ One acustic warning device like a claxon. It has to warn people who are near the machine while its operating; ➢ One intermittent bleeper to warn people while the machine is reversing; ➢ Two flashing yellow lights to signal the machine operating.

3.6 SAFETY SYSTEMS

The machine is equipped with the following safety systems:

- **Socket** (picture 4.5), the same socket used for the battery charger. In case of emergency, this socket must be taken away from the plug by means of its handle.
  The operator must be trained about safety rules. Do never restore this safety system before the problem has been sorted out. If it is necessary ask for the technician help.

- **Emergency button:** the machine is equipped with an emergency button under the driver's seat. If the operator is not aboard, the machine does not start. Moreover, the machine stops automatically if the operator forgets to switch the machine off. In this way the operator must seats again on the machine, switch the machine off, wait for a few seconds and start the machine again

- **Float:** inside the recovery tank there is a floater that stops the machine if the tank is too full. To start the machine again the operator has to empty the recovery tank (see § 4.5.7.).

- **Insufficient battery charge:** the electronic card, that controls all the machine functions except for the traction, disconnect all these functions when the battery charge is lower than 20%. In this way the batteries' lifetime can be longer.

- **Level of water in the solution tank:** there are 4 pilot lights indicating 4 waterline levels in the solution tank. The pilot lights in conformity of the quantity of solution water left in the tank.

3.7 SAFETY DIAGNOSTIC SIGNALING

The electronic card is equipped with a particular system which shows the machine errors through quick flashings on the battery charger display placed on the dashboard.
The number of switched on LEDs represents one of the errors listed below:



Insufficient battery voltage

Traction motor anomaly

Brushes motor anomaly

1 flashing Lift brushes motor anomaly

2 flashings Lift squeegee motor anomaly

Suction motor anomaly

Full recovery tank

1 flashing Accelerator pedal anomaly
2 flashings Switch key anomaly
3 flashings ***

Control card anomaly

1 flashing Flashing anomaly
2 flashings Reverse bleeper anomaly
3 flashings Solenoid valve anomaly
4 flashings Claxon anomaly
5 flashings ***

Battery over voltage

3.8. OTHER DANGERS

FIORENTINI S.r.l. analyzes since the machine design all dangers that can occur while the machine is operating in order to prevent or at least low the operator's accident. Thanks to a series of signals on the machine the operator can avoid many risks that can occur during the machine operating.

CRUSHING

This kind of danger can occur:

- **During the side brushes regulation;**
- **during the batteries recharge because of the fall of the recovery tank.**

Whilst regulating the side brushes, the ignition key must be kept away from the dashboard in order to avoid the casual starting of the machine.
Whilst the batteries recharge, the operator must pay attention that any parts of his/her body enter the batteries room.

	Special labels sticked on the cartes of the brushes or on the recovery tank prevent dangers to the operator (see § 3.7.).

SQUASHING AND SHEARING

This kind of danger can occur:

- **while the operator is regulating the steering wheel by means of the pedal.**

The operator must only use his/her legs during the regulation of the steering column.

Squashing and shearing danger is highlighted by special labels sticked on the case of the steering column (see § 3.7.).

TURNOVER

This kind of ranger can occur:

- **during the normal operating of the machine when you exceed sloping limits as specified in the manual and you use the machine to clean disconnected surfaces or with holes and high depressions (photo 3.2)**

	Do not use the machine to wash sloping surfaces higher than 10% or surfaces with holes or depressions which might compromise the stability of the machine.

	FIORENTINI is not responsible for accidents occurred to people or things provoked by a wrong use of the machine, i.e. using the machine on surfaces which can compromise its stability. *The purchaser must stick proper labels on the machine to show to the operator the right use of the scrubber.*

3.9. SAFETY SIGNALS

DANGERS		Dangers' signals are triangular with black pictures on a yellow background
PROHIBITIONS		Prohibitions' signals are round with black pictures and a red stripe

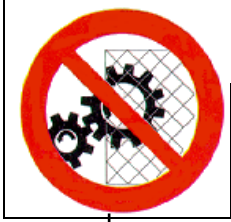	**What is it?**	This signal forbids to remove the protection of pieces in movement.
	What to do	During the installation or the maintenance make sure that the ignition key is not in the dashboard before removing the mobile protections. While the machine is operating make sure that all covers are well fixed.

	What is it?	Crushing danger: it can be due to parts in movement of the machine.
	What to do	During the installation or the maintenance make sure that the ignition key is not in the dashboard before removing the mobile protections.

The purchaser must replace danger signals on the machine if they are deteriorated. It is absolutely forbidden to remove or temper danger signals.

	What is it?	Explosion danger: it may occur while recharging the batteries because of hydrogen spread.
	What to do	During the batteries recharge, please place the machine under a suction chemney or in a ventilated area and keep it away from heat and corrosive substances.

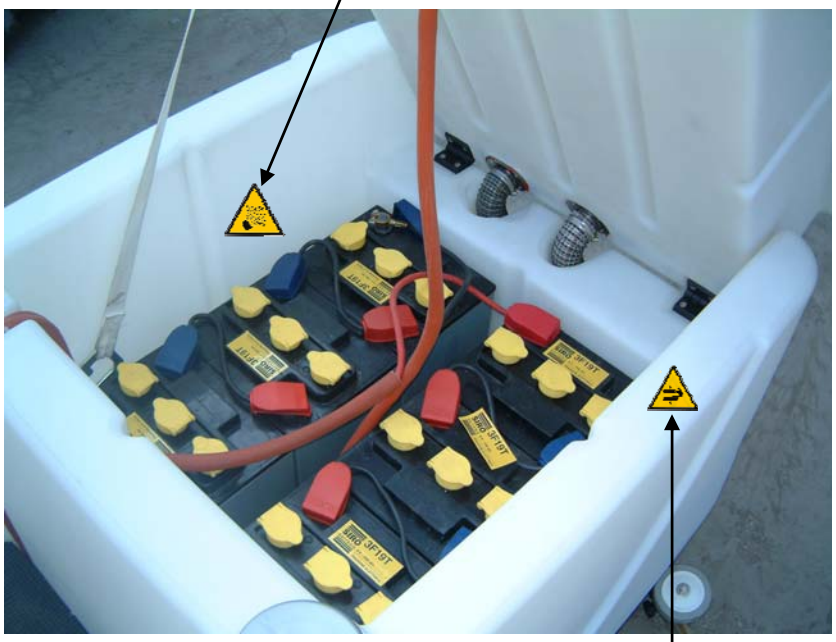

	What is it?	Crushing danger: it can be provoked by the recovery tank overturn.
	What to do	During the batteries water filling, pay attention to the recovery tank casual fall.

The purchaser must replace danger signals on the machine if they are deteriorated. It is absolutely forbidden to remove or temper danger signals.

	What is it?	Squashing or shearing danger: it can occur while regulating the steering wheel position.
	What to do	While regulating the steering wheel, make sure that nobody is near the machine.

	The purchaser must replace danger signals on the machine if they are deteriorated. It is absolutely forbidden to remove or temper danger signals.

4. INSTRUCTIONS FOR STARTING AND USE

4.1. TRANSPORT AND HANDLING

The machine is delivered to the purchaser in a proper package (see picture 4.1 below). A black arrow on the package indicates the barycentre. This arrow must be in the middle of the elevator or transpallet forks. The package must be carefully handled. Do not place one package on another one. If agrred with the purchaser, the machine can be delivered without package, placed on a pallet and fixed by means of straps.

	The purchaser must make sure that the machine has not been damaged during the transport and that all papers are on the machine. Otherwise, the purchaser must immediately contact FIORENTINI in order to sort out the problem. *The purchaser is responsible for the transport of the machine if not differently agreed with FIORENTINI.*

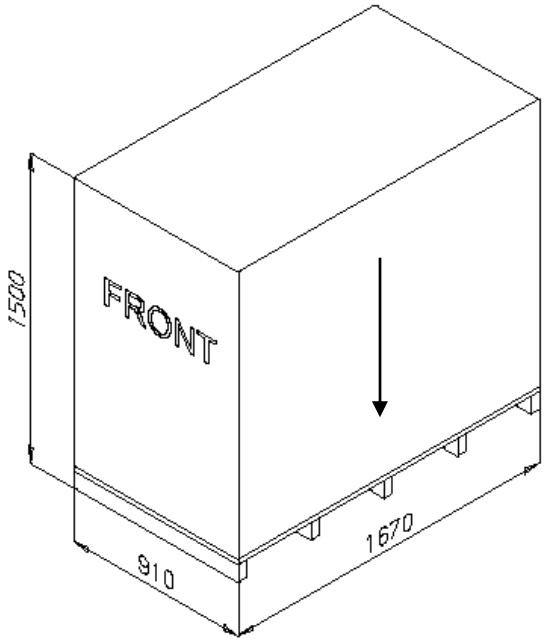

PICTURE 4.1

The machine must be handled with proper devices as stated in the scheme below. Please, make sure that the black arrow on the package are always in the middle of the elevator forks or the sling bands.

PACKAGE	HANDLING EQUIPMENT	PICTURE
Paperboard or plywood box on a pallet	Fork elevator	Nr. 4.2.
None	Fork elevator or crane truck with a two-band-sling and equalizer	Nr. 4.3.

The bands udes for lifting the machine up must have the same loading capacity as the machine load. Handling operations must be done without causing a loss of stability of the machine. Otherwise, the machine can be damaged or the operator can de in danger.

FIORENTINI suggest to use authorized personell (see § 2.3.) to handle the machine.

LOADING SYSTEM

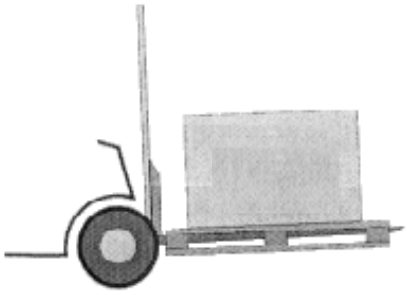

SI

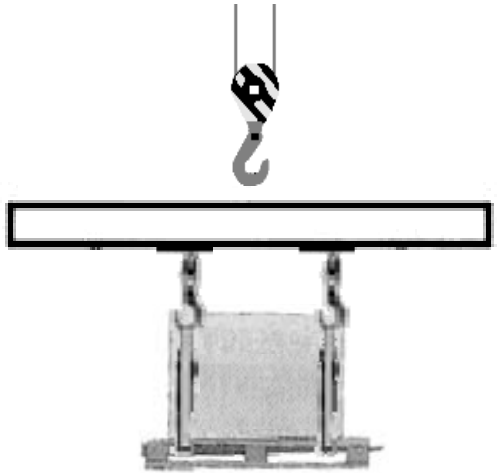

PICTURE N° 4.2 **PICTURE N° 4.3**

4.2. STORAGE

The machine must be stored in a closed and dry place if not immediately installed in order to keep every part safe.
Relative humidity must be lower than 80% and the storage temperature must be between 3°C ≤ t ≤ + 45 °C**.**

4.3. HOW TO UNPACK THE MACHINE

- Cut the straps paying attention to the back spring;
- Remove the staples that join the paperboard and the pallet;
- If the package is mad of plywood, please remove the staples from each side;
- Cut the straps that fix the machine;
- Lay the machine on the floor.

4.4 HOW TO HANDLE THE UNPACKED MACHINE

- Check the machine and install the batteries if not already installed;
- For a brief transport of the machine, please disconnect the batteries cables and remove brushes and squeegee; for a longer transport, please use the original package of the machine.

4.5. INSTALLATION

Installation must be carried out by authorized personnel after reading this manual.

4.5.1 BATTERIES INSTALLATION

- Lift the recovery tank up in order to reach the batteries room (picture 4.3.);
- Install the batteries in their room (picture 4.4.) and make sure that the cases of the batteries are not broken;
- Never fill distilled water after having recharged the batteries.
- Clean the surfaces for the connections;
- The operator can easily lift the batteries up by means of handles.

PICTURE Nr. 4.3

PICTURE Nr. 4.4

4.5.2 BATTERY CHARGER INSTALLATION

Batteries must be recharged in a place equipped with a proper suction system of gases spread during this operation. Otherwise, batteries must be charged in a ventilated and dry place far from heat sources and corrosive substances.
Protect the electric network with a delayed switch or with a fuse whose capacity is higher than the battery charger maximum input.
Control the battery outlet polarity.

Connect the battery charger to the machine socket

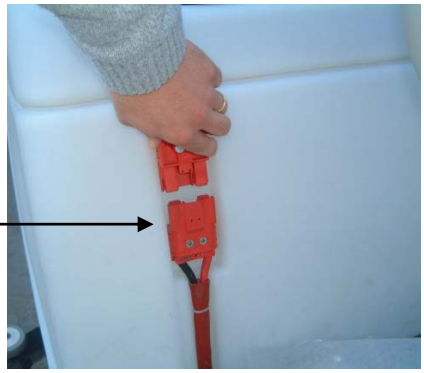

PICTURE Nr. 4.5

4.6. CONTROL DEVICES

4.6.1. DASHBOARD

The dashboard is made of a series of switches, which activate or deactivate all the machine functions. Picture 4.6. shows the dashboard of the machine and the switches function is explained in the following scheme.

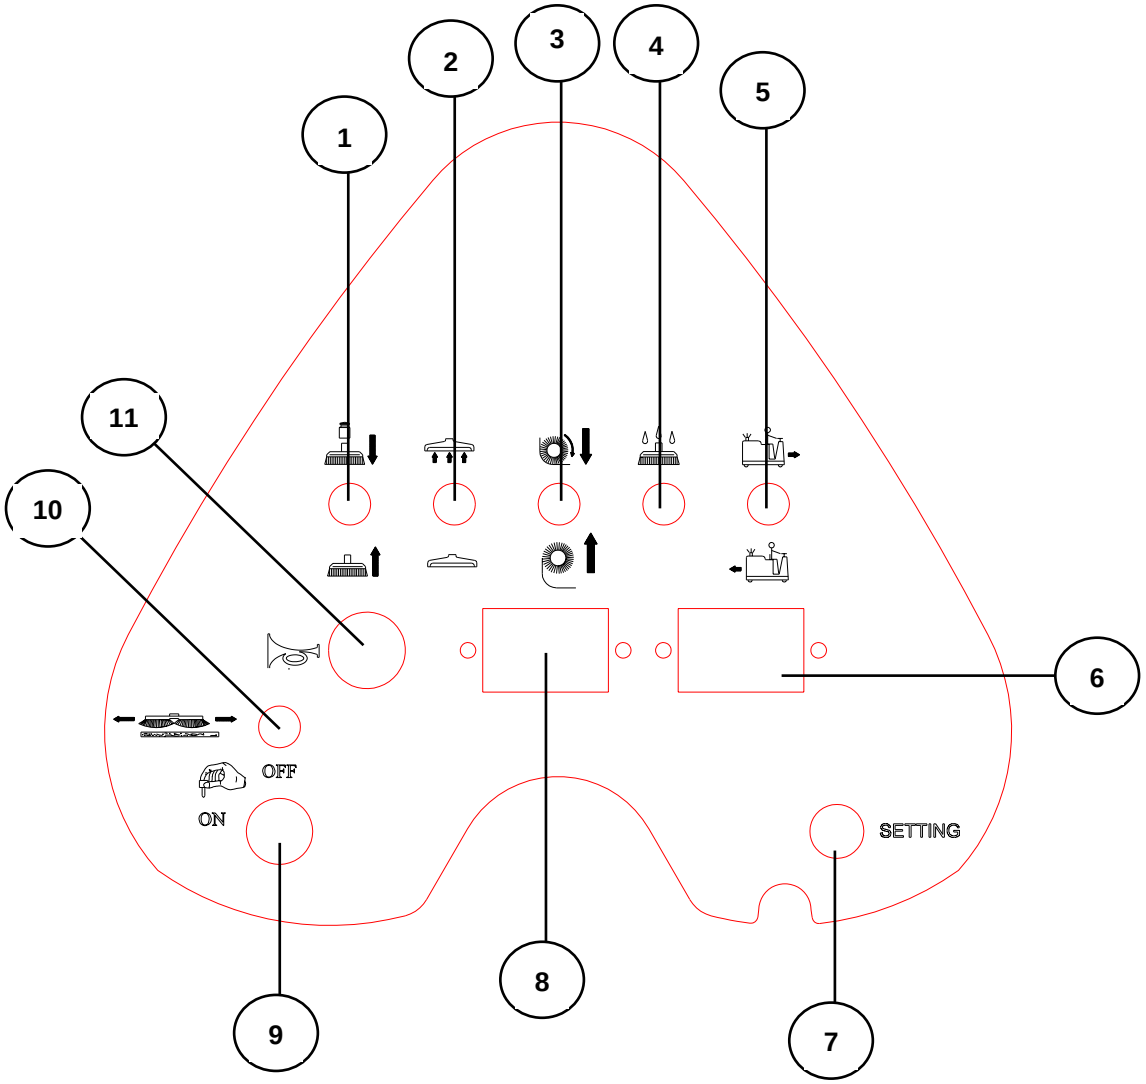

PICTURE Nr. 4.6

N r .	SWITCH	FUNCTION
1		WASHING BRUSHES DOWN
		WASHING BRUSHES UP
2		SOLUTION SOLENOID VALVE
3		WARERLINE LEVER INDICATOR
4		SUCTION ON
		SUCTION OFF
5	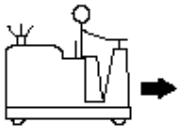	FORWARD GEAR
	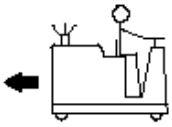	BACKWARD GEAR
6		DIGITAL HOUR COUNTER
7		SOLUTION WATER ADJUSTMENT

Nr.	SWITCH	FUNCTION
8		**BATTERY CHARGER INDICATOR**
9		**GENERAL SWITCH**
10		**TRANSLATING JACK SWITCH**
11		**HORN**

4.7. FUNCTIONING

The operator, thanks to his/her experience, has to choose the right type of brush and detergent for the surfaces that has to be washed and to decide if the floor needs a second washing.
Follow these instructions for a correct washing:

1. press the brushes motor switch;
2. press the solution solenoid valve switch;
3. press the suction switch.

By means of the accelerator pedal the washing brushes and the suction motor are activated. On the contrary, both the washing brushes and the suction motor are disactivated after a few seconds if the operator leaves this pedal. Before the surface is completely dry, the operator must switch the solution solenoid valve off because this is not activated/disactivated by the accelerator pedal.
The operator has to do a second washing if the surface is particularly dirty:

1. wash the surface with the squeegee up and the brushes down;
2. activate the brushes;
3. press the solution solenoid valve switch;
4. leave the solution on the surface to dissolve the dirt;
5. do a second washing with brushes and squeegee down, the suction activated and the solution solenoid valve open.

TRANSLATING PLATE

The machine is equipped with a particular device that translate the around 150 mm. brushes plate to the right in order to do a better cleaning along corridors and shelvings. The operator must move lever nr. 10 to the right to translate the brushes plate or to the left if the operator wants to put the plate in its original position. Anyway, the brushes plate return into its original position when the operator leaves the accelerator pedal.

i	*Before any operation, make sure that all protections are well fixed.*

4.7.1 PREPARING AND STARTING THE MACHINE

If the machine is connected with the battery charger, the operator must firstly disconnect the battery charger plug from the batteries one and connect the batteries plug with the power supply plug (see picture 4.5.). Secondly, the operator must fill water lifting the recovery tank up and turn the cap (see detail nr. 1 in picture nr. 4.7.). Now the operator can seat on the machine, start it and wash the surface.

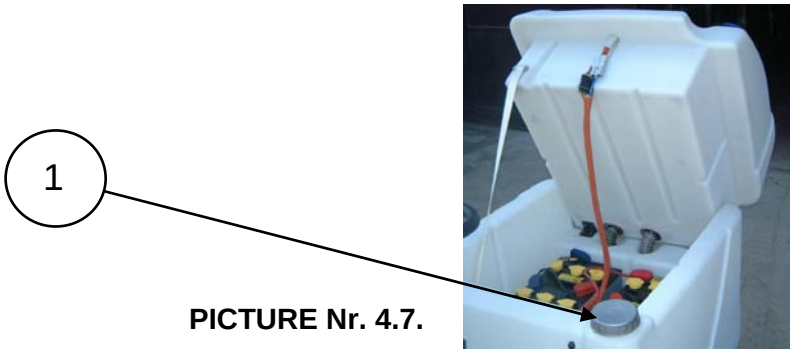

PICTURE Nr. 4.7.

4.7.2 CHOOSING THE RIGHT DETERGENT

Choosing the right detergent is very important for a perfect cleaning. A too strong detergent could damage the surface. A good quality detrgent has to produce little foam. Alternatevely, the operator can add an antifoaming additive or 50 cc of wine vinaigre in the recovery tank in order to avoid the suction motor damage.

Make sure that the detergent is suitable for the dirty surface. FIORENTINI S.r.l. is not responsible for damages provoked by too aggressive detergents.

4.7.3 DRIVING POSITION REGULATION

By means of the lever (see detail nr. 2 in picture nr. 4.9.) for the steering column regulation, the operator can pull backward or push onward the steering wheel in order to have a driving position which fits his/her body.

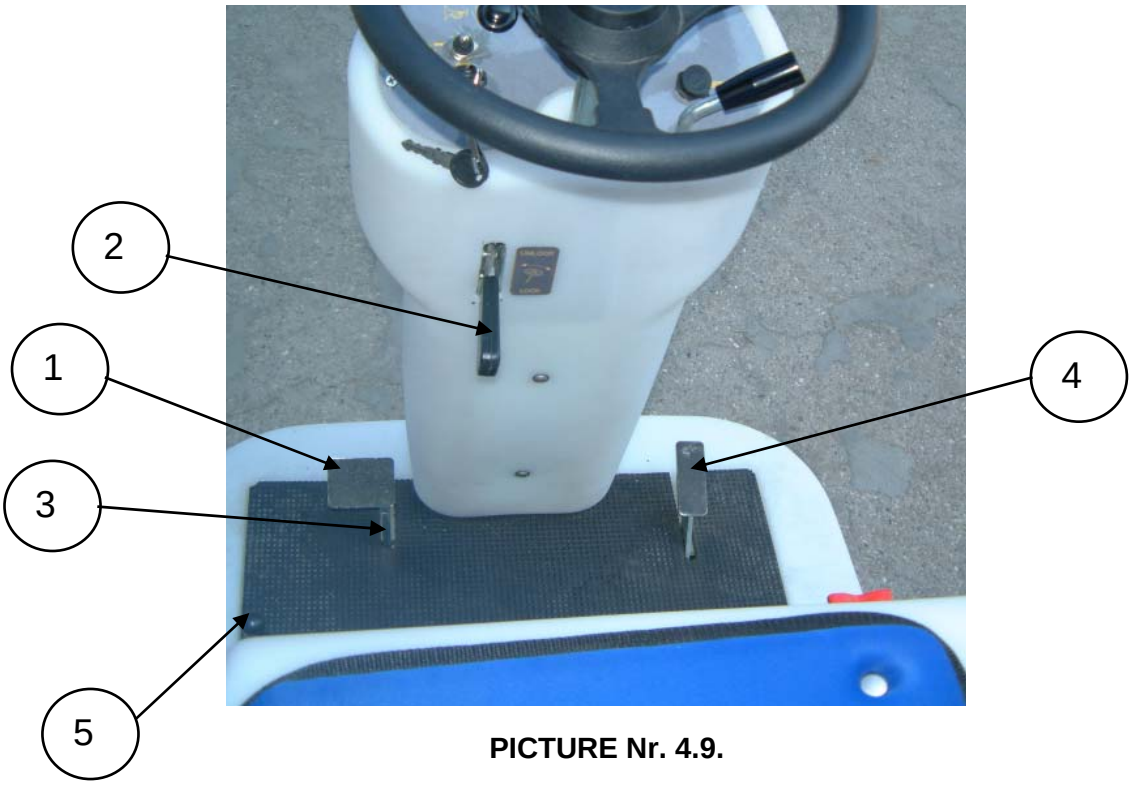

PICTURE Nr. 4.9.

4.7.4 RUDDER BAR FUNCTIONING

The rudder bar of this scrubber machine is composed by:

- Accelerator pedal (see detail nr. 4 in picture nr. 4.9.): by means of the forward/backward lever and the accelerator pedal, the machine moves forward or backward.

The accelerator pedal activates all the machine moving parts. This is why the brushes and the suction motor are activated pressing the accelerator pedal and their switches on the dashboard. On the contrary, the accelerator pedal can't activate the solution solenoid valve, which has to be opened and closed by the operator.

- Service brake (see details nr. 1, 3 and 5 in picture nr. 4.9.): it has to slow and stop the machine. If the operator wants to set the service brake on, he/she has to press the service brake pedal (see detail nr. 1 in picture nr. 4.9.). If he /she wants to release the service brake, he/she has to press both the brake pedal and the release pedal (sse details nr. 1 and 2 in picture 4.9.) and press the release knob (see detail nr. 5 in picture nr. 4.9.).
- Steering wheel regulation (see detail nr. 2 in picture nr. 4.9.): the operator has to pull up the lever to loose the steering wheel and pull backward or push onward the steering wheel in order to have a driving position which fits his/her body. Then the operator has to release the lever.

4.7.5 DETERGENT CONTROL

During the washing the operator can control the detergent quantity by means of a cock, which is at the bottom of the machine on the left inside the protection rubber (see detail nr. 1 in picture 4.10.).

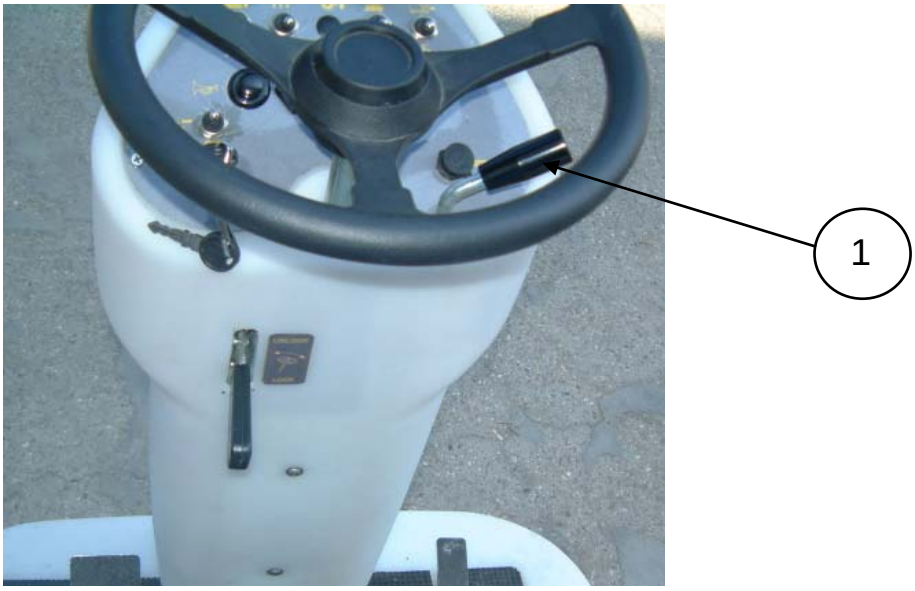

PICTURE Nr. 4.10.

IMPORTANT: before checking the water quantity that flows to the brushes, make sure that the ignition key is not in the dashboard in order to avoid a casual starting of the machine.

4.7.6 SQUEEGEE ADJUSTMENT

The squeegee has to be well regulated in order to have a perfect dry system. This kind of squeegee can perfectly suck water, which flows into the suction pipe, but it must be parallel to the surface.

The operator has to follow the instructions below for the squeegee adjustment:

- Replace the ignition key from the dashboard in order to avoid the casual starting of the machine.
- By means of the knob (see detail nr. 2 in picture nr. 4.11.) regulate the squeegee. The best squeegee pressure is reached when the corner of its blade is in contact with the floor and their inclination is between 45° and 60°.

PICTURE Nr. 4.11.

- Squeegee pressure regulation: the operator has to work on the squeegee driving wheels cam pins (see detail nr. 1 in picture nr. 4.13.). The operator has to unloose the screw at the bottom of the pin (detail nr. 3 in picture nr. 4.13.) by means of the spanner delivered with the machine (picture 4.14.). Afetrwards the operator has to tighten this screw again.

PICTURE Nr. 4.13.

PICTURE Nr. 4.14.

Make sure that the two wheels of the squeegee are well regulated in order to keeps both its blades parallel to the floor.

4.7.7 WATER DISCHARGE

This scrubber machine is equipped with two pipes for water discharge (picture 4.15.):

- A pipe for the recovery tank discharge (see detail nr. 1 in picture nr. 4.15.);
- A suction pipe (see detail nr. 1 in picture nr. 4.15.);
- Check and clean the filter on the left side of the machine inside the rubber protection every week (see detail nr. 4 in picture nr. 4.15.);
- Recovery tank cap (see detail nr. 3 in picture nr. 4.15.).

If you need to discharge water from the tanks, you have to place the machine on a dump well, release the pipe of the tank and open the rubber cap at the end of the pipe itself.

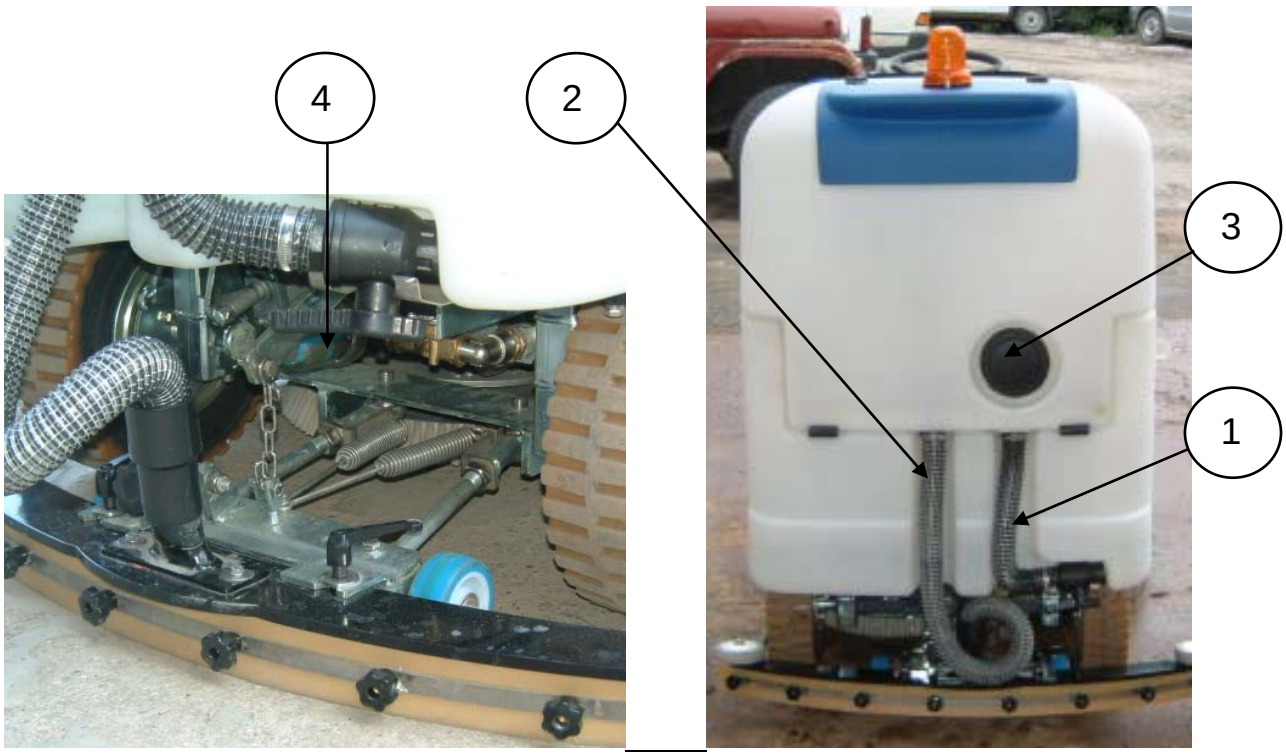

PICTURE Nr. 4.15.

4.7.8 EMERGENCY SHUT-DOWN

This scrubber machine is equipped with socket as well as with emergency shut down. The latter can lock the machine.

4.7.9 BRUSHES REPLACEMENT

The operator has to follow the instructions below to replace the brushes:

- Take the ignition key away from the dashboard in order to avoid a casual starting of the machine;
- Right side brush replacement: remove the case by means of the lever (see detail nr. 1 in picture nr. 4.16) and translate it outside. Translate counterclockwise the right brush and remove it;
- Left side brush replacement: follow the same istructions as for right side brush replacement (see detail 3 in picture 4.18). Translate clockwise the left brush and remove it;
- To set a new brush up (see detail 2 in picture 4.17): put the coupler pins under the brush support slots, pull the brush up and translate it (clockwise for the right brush and counterclockwise for the left one);
- Set again the brushes cases up and fix them by means of the lever.

PICTURE Nr. 4.16.

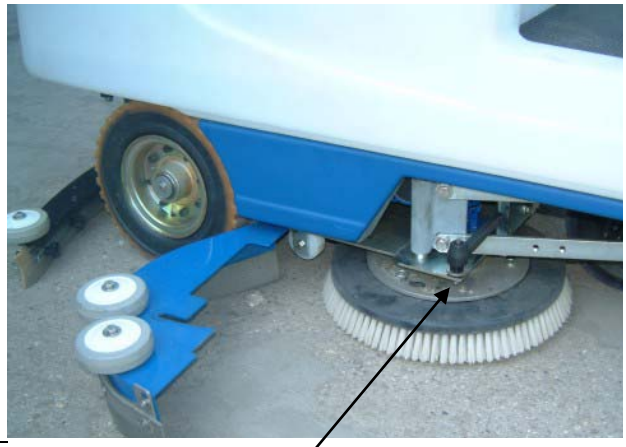

PICTURE Nr. 4.17.

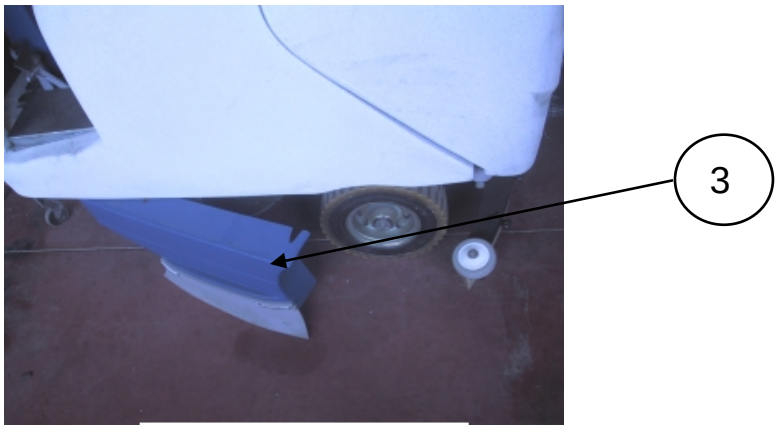

PICTURE Nr. 4.18.

Make sure that both cases of the lateral brushes are well fixed before starting the machine.

4.7.10 SQUEEGEE BLADES REPLACEMENT

Squeegee blades must be replaced when their hedge is worn. A perfect hedge in the blade allows a perfect dry (picture 4.19).

Follow these instructions to replace the squeegee blades:

- Remove the squeegee from the machine and lay it on a table;
- Remove the internal and external knobs, the steel strips and the worn blades;
- Set the new blades up, tighten the knobs and regulate the squeegee.

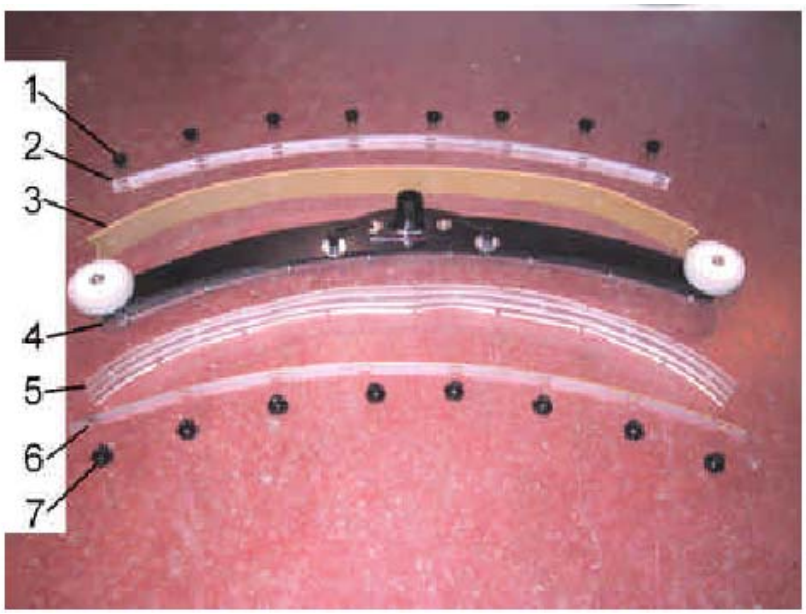

1. pomelli per listello posteriore
2. listello lama posteriore
3. lama posteriore
4. corpo squeegee
5. lama anteriore
6. listello anteriore
7. pomelli per listello anteriore

PICTURE Nr. 4.19.

4.7.11 DRIVING WHEEL TIRE REPLACEMENT

Follow the instructions below to replace the driving wheel tire (picture 4.16):

- Take the ignition key away from the dashboard in order to avoid a casual starting of the machine;
- Unscrew the M8 nuts and disconnect the motor cables (detail nr. 1);
- Unscrew the eight socket head screws (detail 3);
- Remove and replace the tire (detail 2);
- Screw the M8 nuts and connect the motor cables;
- Screw the eight socket head screws.

PICTURE Nr. 4.16.

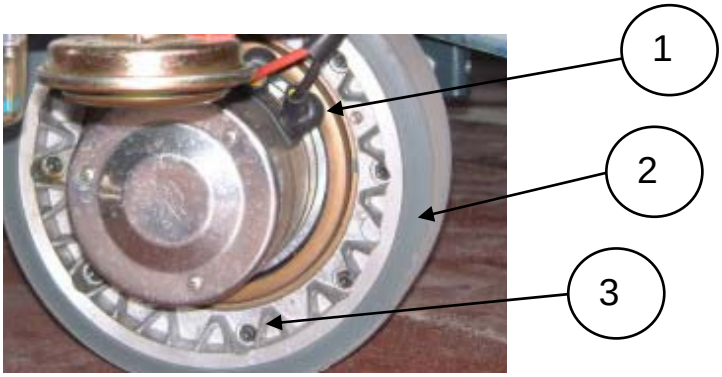

Make sure that the machine is stopped and slightly pulled up.

5. MAINTENANCE

5.1. PERIODICAL MAINTENANCE

A periodical maintenance is very important.
Please write down in the format you find below all the interventions done on the machine.

- *Trained personnel only can service the machine and especially electric and electromechanical parts by means of suitable tools and equipments.*
- *Make reference to FIORENTINI S.r.l. only for service and spare parts (§ 7.1. and § 7.2.).*

OPERATION	INTERVENTION	HOW OFTEN
Cleaning	Clean the recovery tank and the oil filter of the suction motor	Every day
	⚠ • ***Do not use corrosive substances.*** • ***Do not use bolts of water.***	
	➢ Check the suction pipes and the squeegee	Every week
Check up	➢ Check the rubber suction blades of the squeegee ➢ Check the water battery level	Every 15 days
	Check the filter of the clean water tank	Every month
	Check and regulate the breaking system	Every 3 months
	Check the connection of the battery cables	Every 6 months
	Check the brushes of each motor	Every year
	➢ Check the safety devices ➢ Check the electric system	Every year

5.2 BATTERIES MAINTENANCE

The operator has to check the batteries charge when the machine is on duty by means of the indicator on the dashboard, which shows:

- ➢ Green light: charged battery
- ➢ Yellow light: slightly charged battery
- ➢ Red light: uncharged battery

The operator must keep the battery room open during the batteries recharge. Moreover:

- ➢ *It is forbidden to use flames and/or to smoke near the batteries;*
- ➢ *Pay attention to the battery acid;*
- ➢ *Do not develop sparks near the batteries;*
- ➢ *Pay attention to the batteries gazes, which can burst;*
- ➢ *Do not invert battery polarities.*

5.2.1 HYDROMETRY

In order to check the batteries hydrometry the operator has to follow the instructions below:

- By means of a hydrometre draw a small quantity of electrolyte so that the floater reaches the surface;
- Make sure that the floater inside the hydrometre is not blocked;
- For a new measurement, after having filled the batteries with distilled water, the operator has to wait until the liquid inside each battery becomes homogeneous.

5.2.2 WATER FILLING UP

- Fill distilled water up in each battery cell before the recharge. The liquid inside the batteries has to be of 6 mm. over the plates;
- The operator has to repeat the same operation every time the level decreases (every week).

5.2.3 CHARGE LIMITS

It is not necessary to recharge the batteries if the hydrometry, after a work day, is not under 1,24 (28 Bè). The highest suggested temperature is 45°C. If the electrolyte temperature increases more than 10/12 °C compared to the outside temperature, the batteries can be overcharged.

5.2.4 OFF DUTY OR INACTIVE BATTERIES

Inactive batteries looses their automatically their charge. If batteries do not continually work, the operator has to:

- Charge the batteries once a month with a 'final' stream intensity until gas is spread and the batteries voltage and weight are constant for 3-4 hours. This operation has to be done even if the absolute weight is high;
- Keep the batteries in a dry room.

5.2.5 BATTERY CHARGER TECHNICAL FEATURES

The battery charger has to show the features listed in the scheme below:

IN	230V, 50Hz, 5A
OUT	36V, 30A

See § 2.3 TECHNICAL DATA for the batteries technical features.

5.2.6 BATTERIES DISPOSAL

Old batteries are toxic wastes and they have to be thrown in a suitable and authorized place for the batteries disposal. For a short storage, old batteries must be located in an authorized room. Moreover, they must be stored in sealed plastic tanks, whose capacity is not lower than the electrolyte.

5.3 SUCTION MOTOR MAINTENANCE

The suction motor has to be checked up and cleaned. Every six months motor brushes have to be checked and replaced if it is necessary.

To maintain the suction motor please follow the instructions below:

- Take the ignition key off the dashboard, disconnect the plug (see detail 3 in picture 5.1), remove the steel plate that fixes the suction motor and the motor itself (see detail 1 in picture 5.1);
- Remove the sponge filter under the motor, wash it and put it again in its position;
- Check the motor fan through the hole in the front side of the suction motor;
- Remove the plastic cover, lossen the screws and both the brushes supports and check the motor brushes (see detail 2 in picture 5.1);
- Do now the opposite operations to set everything up again.

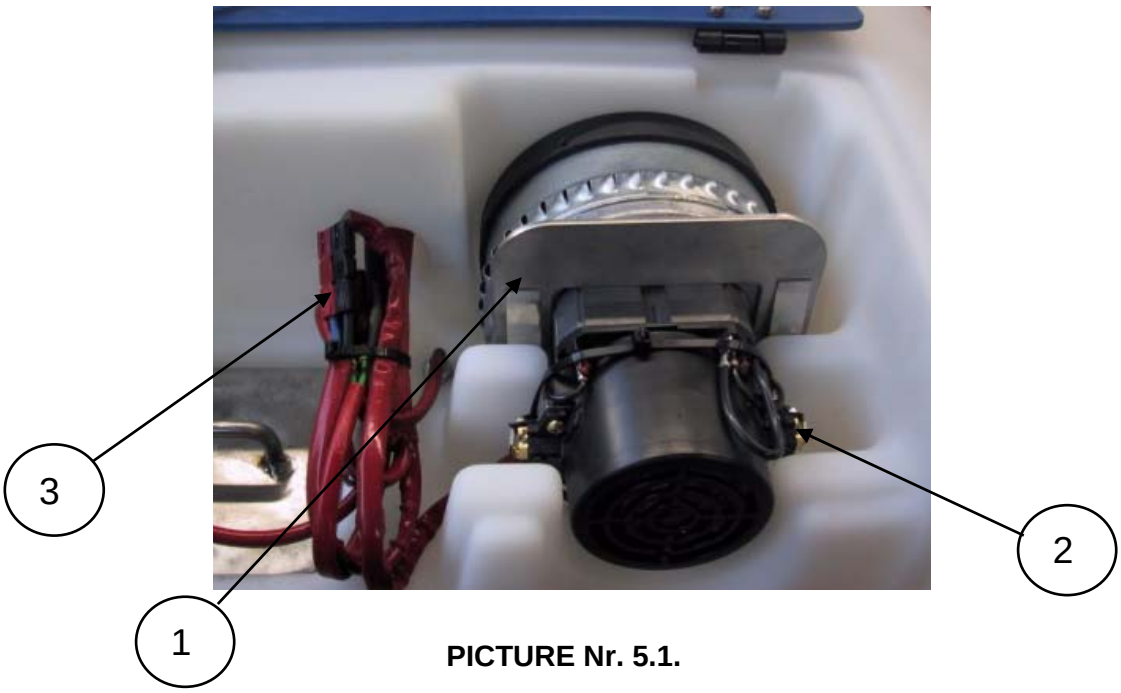

PICTURE Nr. 5.1.

5.4 ELECTRIC EQUIPMENT CONTROL

It is very important to check the electric system up every two years. Disconnected cables or burnt cables must be immediately replaced.

Interventions on the electric system must be carried out by a trained technician.
Every kind of intervention not explained in the operator manual must be carried out by FIORENTINIs technicians.

5.5 Tests to be carried out

	HOW OFTEN	OPERATOR
INSPECTION		
Safety devices	Every 2 years	Trained technician
Electric system	Every 2 years	FIORENTINI technician
Braking system	Every 3 months	Trained technician
Complete check up	Every 5 years	FIORENTINI technician
MAINTENANCE		
Recovery tank cleaning	Every day	Operator
Clean water tank	Every month	Operator
Suction motor filter	Every day	Operator
Suction pipes cleaning	Every week	Operator
Squeegee cleaning	Every week	Operator
Squeegee blades	Every week	Operator
Battery water level	Every week	Operator
Battery cables fixing	Every 6 months	Trained technician
Brushes in each motor	Every year	Trained technician

5.6. MAINTENANCE REGISTER

DATE	*OPERATOR*	*INTERVENTION*	*SIGNATURE*

6. SERVICE

6.1. SERVICE ADDRESSES

Do not hesitate to contact FIORENTINI S.r.l. service for any kind of information or request.

ING. O. FIORENTINI s.r.l.

"THE BEST IN FLOOR MACHINES"

FILIALI:
20132 MILANO – Fax. 02/2592779
Via Palmanova 211/a – Tel. 02/27207783 - 2564810
00155 ROMA – Fax. 06/22754075
Via Carlo Carrà 13 – Tel. 06/22754040-2275060
STABILIMENTO:
50030 PIANCALDOLI (FI) – Fax. 055/817144
Loc. Rombola – Tel. 055/8173610

Most of the technical problems can be sorted out with short intervention. This is why FIORENTINI S.r.l. suggest to read carefully this manual before using the machine. On the contrary, if the customer needs a FIORENTINI'S technician, please inform us about the problem in order to sort it out with the right material.

6.2 CLAIM REPORT

Please, fill in the format below if the machine shows particular problems.

Operator:

Company: _____

Operator's name: _____

Role: _____

Date: _____ Signature: _____

Machine description:

Machine: **CUCCIOLO** Type: _____

Purchase date: _____ S.N.: _____

Warranty: ❑ YES ❑ NO Work hours: _____

Where does the machine normally work? _____

Fault:

Code of the defected component: _____ Description: _____

Fault:	Fault short description:
❑ Mechanical component	
❑ Wrong functioning	_____
❑ Electric system	
❑ Engine	_____
❑ Missing component	
❑ Estremely noisy	_____
❑ Water leak	
❑ Other	_____

Customer's suggestion:

_____

_____

_____

Mat. n.
Serial no.
Nr. de serie _____

Data di spedizione
Shipment date
Date de spedition _____

Distributed by:

ING. O. FIORENTINI s.r.l.

"THE BEST IN FLOOR MACHINES"

FILIALI:
20132 MILANO – Fax. 02/2592779
Via Palmanova 211/a – Tel. 02/27207783 - 2564810
00155 ROMA – Fax. 06/22754075
Via Carlo Carrà 13 – Tel. 06/22754040-2275060
STABILIMENTO:
50030 PIANCALDOLI (FI) – Fax. 055/817144
Loc. Rombola – Tel. 055/8173610